

Luxury MassageChair

Instruction Manual



Product Specifications

Product Name	Luxury Massage Chair
Rated Voltage	AC220V ~50Hz
Rated Power	90W


User Manual

Thank you for purchasing your Ultimate Health massage chair.
Before operating your new chair please read this instruction manual carefully.
Please pay attention to the important safety warnings and keep this manual for future use.


Contents

Chair Overview	2
Unpacking and Installation	3
Installation	4
Moving the Chair	5
Remote Control Manual	6
Remote Control Keys	7
Product Specifications	8

Chair Overview

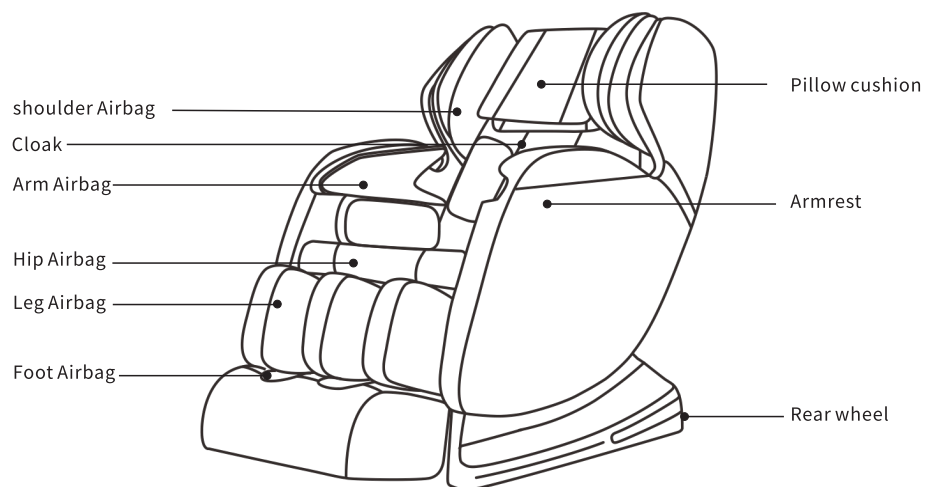



Remote Control Keys


 **Power:** Press to turn the Massage Chair On or Off

Press PowerI: Press the power button and select either automatic massage or manual massage option. The base time is set to 15 minutes.

Automatic Mode Program Selection: "Kneading mode", "Tuina mode", "Strong mode", "Leisure mode", "Sleep mode".


 **Pneumatic automatic:** Press to turn the pneumatic automatic On/Off

 **Shoulder arm balloon:** Press to turn the shoulder arm balloon On/Off


 **Seal cushion head air bag:** Press to turn the seal cushion head air bag On/Off


 **The leg bag:** Press to turn the leg bag On/Off


 **Zero:** Press to move the chair into the zero gravity position (3 steps)


 **Soles of the feet hip:** Press to turn the foot roller On/Off or adjust the speed (3 levels)

 **Foot speed:** Press to turn the foot speed on


 **Timing:** Use this button to change the massage time anywhere between 5 and 30 minutes. The default time is 30 minutes.

 **Heating:** Press to turn the heating On/Off

 **Rise:** Long press, calf rise; backrest down.


 **Drop:** Long press, lower leg; backrest rises.

Remote Control Manual

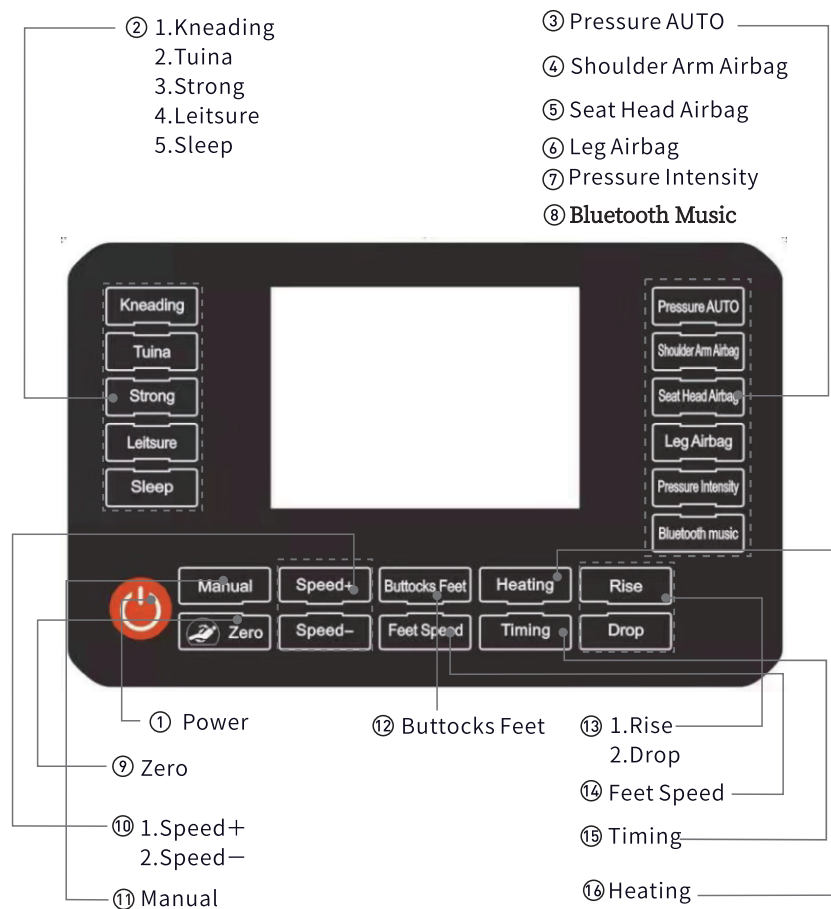


Unpacking and Installation

Remove the outer packaging carefully

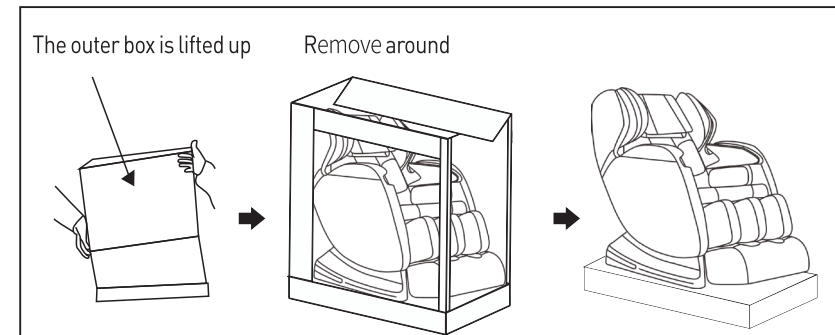

Position the Massage Chair

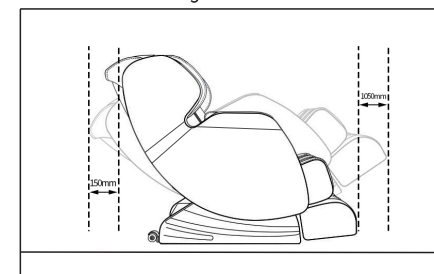

- Carefully lift the massage chair out of the base carton and place in the desired location.
- When positioning the massage chair be sure to leave 15cm space at the back of the chair and 15cm space in front of the chair so that the legs and backrest can be reclined and raised without contacting walls or other items.
- Do not place the power cord in the electric control box at the rear of the chair. Check to ensure the cord is not under the massage chair.

Installation




Attach the power cord to the socket at the back of the Chair and plug into the mains.

Attention:

- Do not use in a wet area such as bathrooms or saunas.
- Place the chair on a flat, non-slippery surface.
- Do not place in direct sunlight or other hot or dusty locations.

Moving the Chair

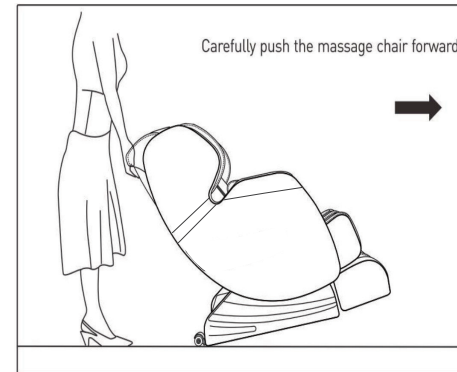

- Place both hands on the back of the chair and apply weight to tilt to a 45-degree angle. Move the chair carefully on the roller castors to locate in the desired position.
- Note: Do NOT attempt to move the chair while someone is sitting in it.